


DigiKeyer II and TrueTTY setup

Router setup:

Note: The absolute port numbers do not matter. The key is consistency - the same port number must be used for a specific function every time it is used.


1. TrueTTY does not use a radio control port. You may assign the Control port for use by a logger or OmniRig.

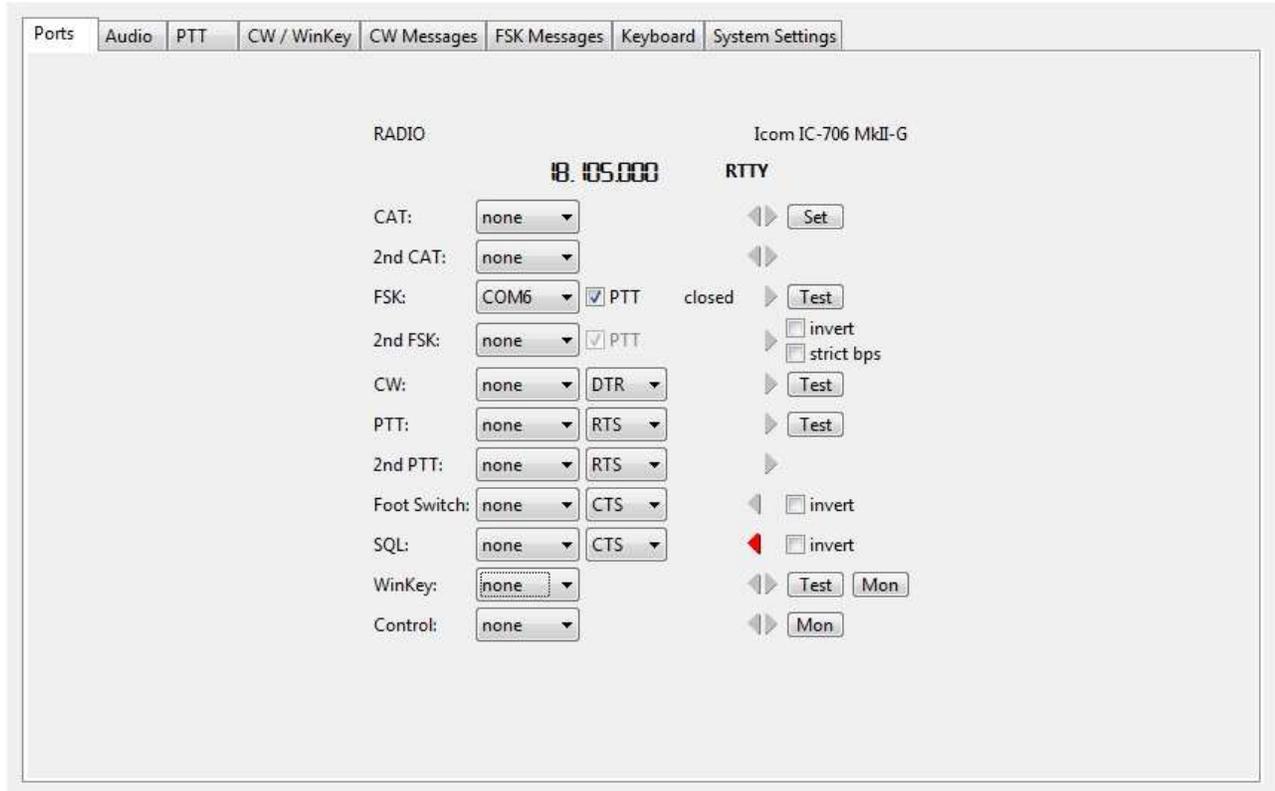

2. TrueTTY does not use the CW Port.
3. Assign a port for FSK and check the PTT box.
4. Save settings to a preset by selecting menu **Preset | Save as**. Choose a position and name it TrueTTY.

TrueTTY setup:

1. Click **Setup | Interface**

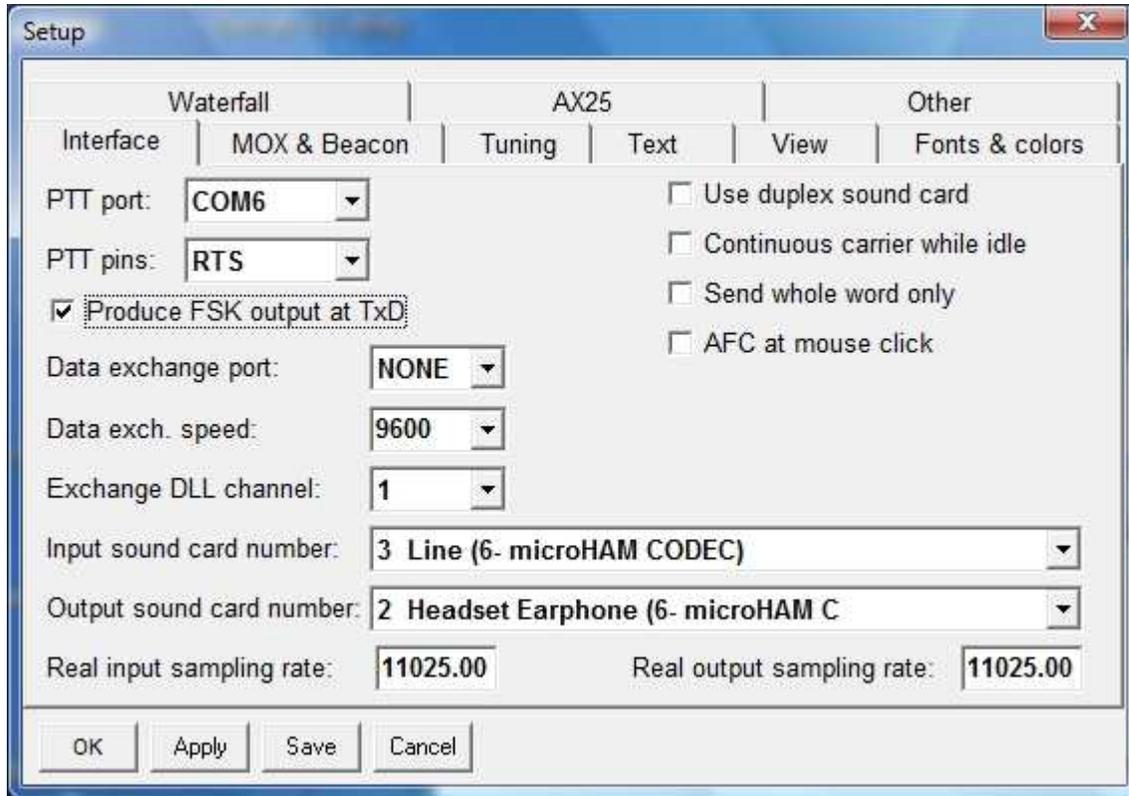

2. Set the PTT to the port you selected for FSK in Router.
3. Set PTT pins to RTS
4. If you will be using FSK for RTTY, check "Produce FSK output at TxD"
5. Set the Input sound card number to "Line (microHAM CODEC)"
6. Set the Output sound card number to "Headset Earphone (microHAM CODEC)" if you will be operating AFSK.
7. Set other options as needed for your operation.