

WSPR setup:

1. Select the **Setup | Station Parameters** or press **F2**.
2. Select "Line (microHAM CODEC)" for Audio In.
3. Select "Headset Earphone (microHAM CODEC)" for Audio Out.
4. Set PTT Port to the virtual serial port you assigned for **2nd PTT** in Router and set PTT Method to RTS.
5. Check Enable CAT.
6. Set CAT port to the port you set for 2nd CAT in Router
7. Configure your rig type and data communication parameters.

