


DigiKeyer and WSJT6 Setup

Router setup:

Note: The absolute port numbers do not matter. The key is consistency - the same port number must be used for a specific function every time it is used.


1. WSJT6 does not use a radio control port, FSK Port, or CW Port. You may assign those ports for use by other software (such as a logging program) which may be running at the same time as WSJT6.
2. Assign the **2nd PTT** port for WSJT to put the transceiver into transmit.

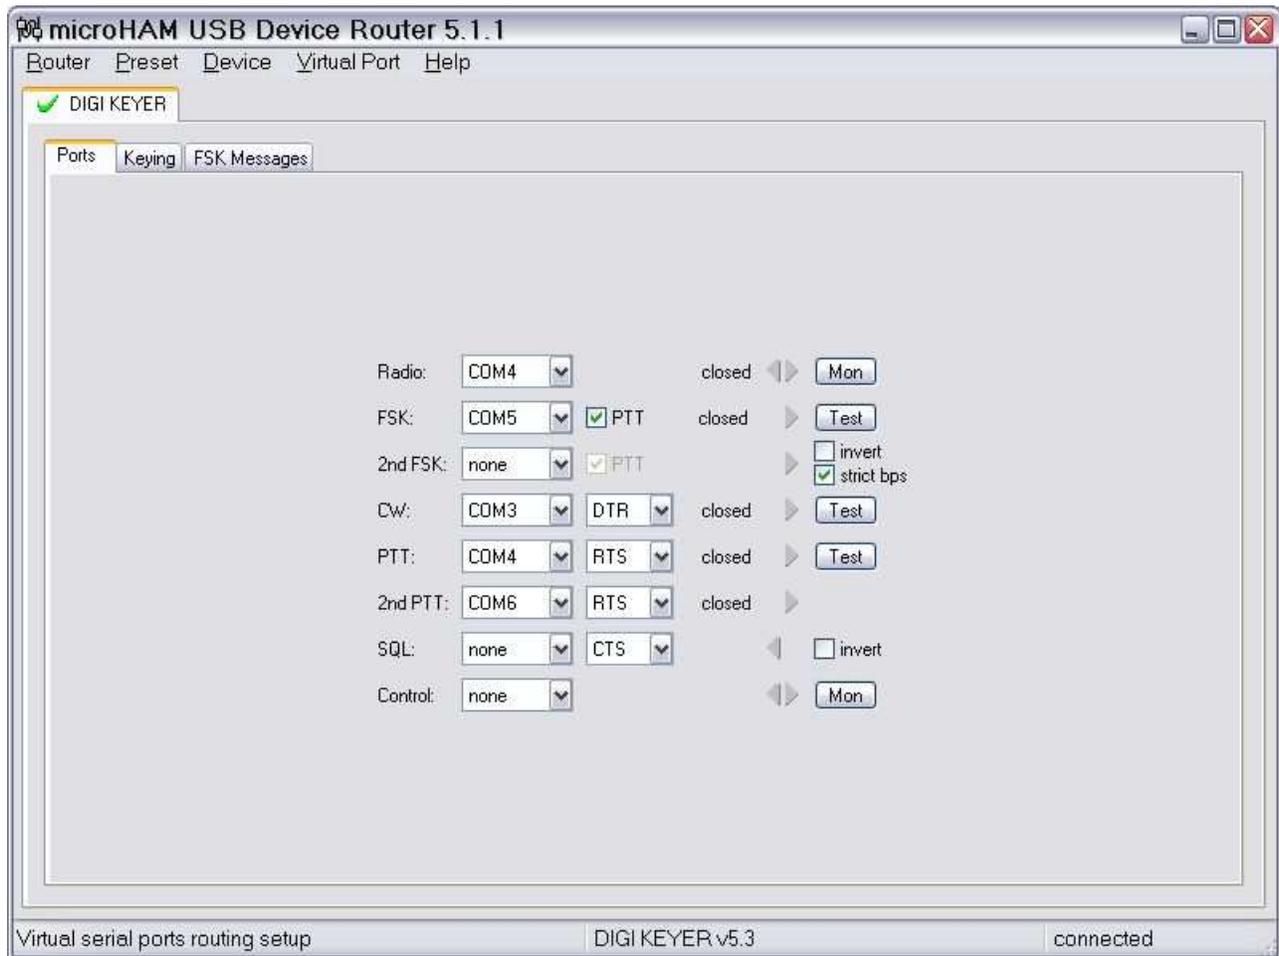

3. Save settings to a preset by selecting menu **Preset | Save as**. Choose a position and name it WSJT6.

WSJT6 setup:

1. Select the WSJT6 Console Window and make note of the "Audio Device" numbers for USB Audio CODEC Input and Output

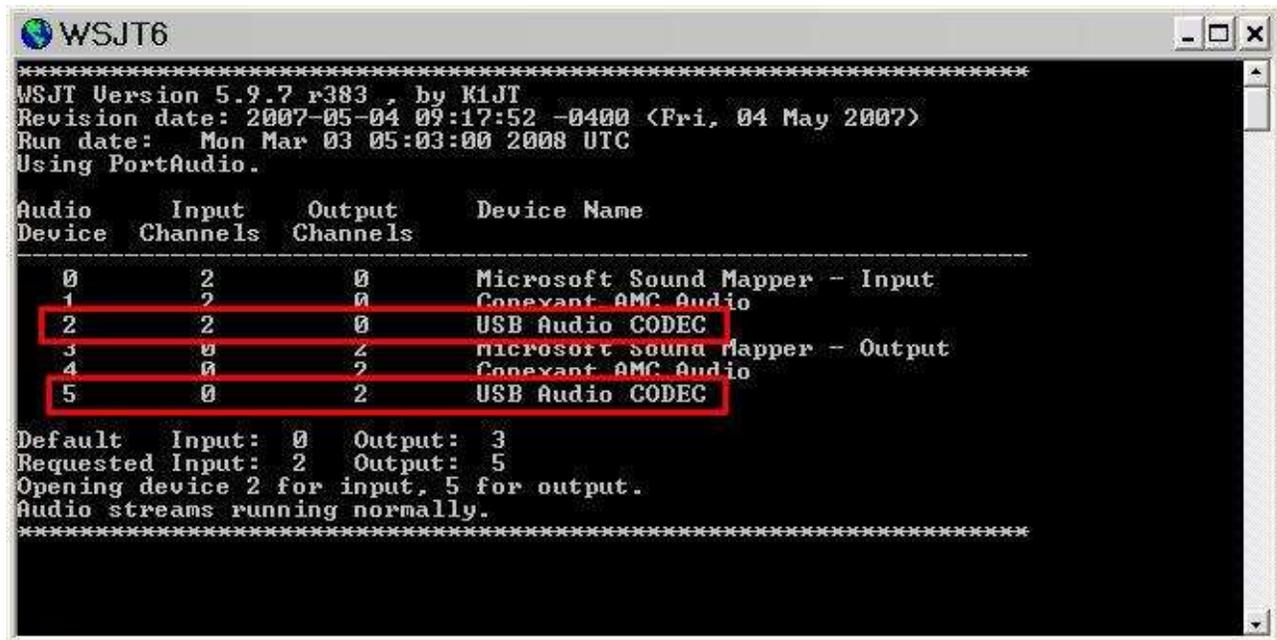


The screenshot shows the WSJT6 console window with the following text and table:

```
*****
WSJT Version 5.9.7 r383 , by K1JT
Revision date: 2007-05-04 09:17:52 -0400 <Fri, 04 May 2007>
Run date: Mon Mar 03 05:03:00 2008 UTC
Using PortAudio.
*****
```

Audio Device	Input Channels	Output Channels	Device Name
0	2	0	Microsoft Sound Mapper - Input
1	2	0	Conexant AMC Audio
2	2	0	USB Audio CODEC
3	0	2	Microsoft Sound Mapper - Output
4	0	2	Conexant AMC Audio
5	0	2	USB Audio CODEC

```
Default Input: 0 Output: 3
Requested Input: 2 Output: 5
Opening device 2 for input, 5 for output.
Audio streams running normally.
*****
```

2. Select **Setup | Options** or press **F2** to open the WSJT Options dialog.

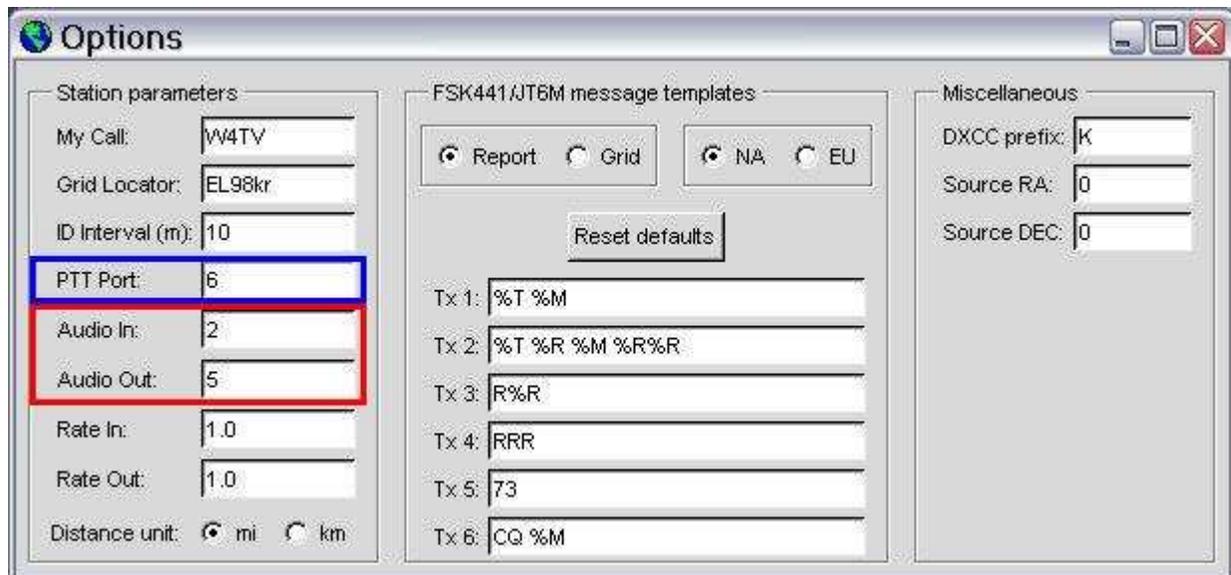

3. Set Audio In: and Audio Out: to the audio device numbers from the Console screen.
4. Set PTT Port to the virtual serial port you assigned for **2nd PTT** in Router.