


# DigiKeyer and WSPR Setup

## Router setup:

Note: The absolute port numbers do not matter. The key is consistency - the same port number must be used for a specific function every time it is used.


1. WSPR uses a radio control port only for changing bands and tuning to a new frequency. It is convenient to use the 2nd CAT port for WSPR. This allows the CAT, FSK, PTT and CW ports to be used for your normal logging software.
2. Assign the **2<sup>nd</sup> PTT** port for WSPR to put the transceiver into transmit.

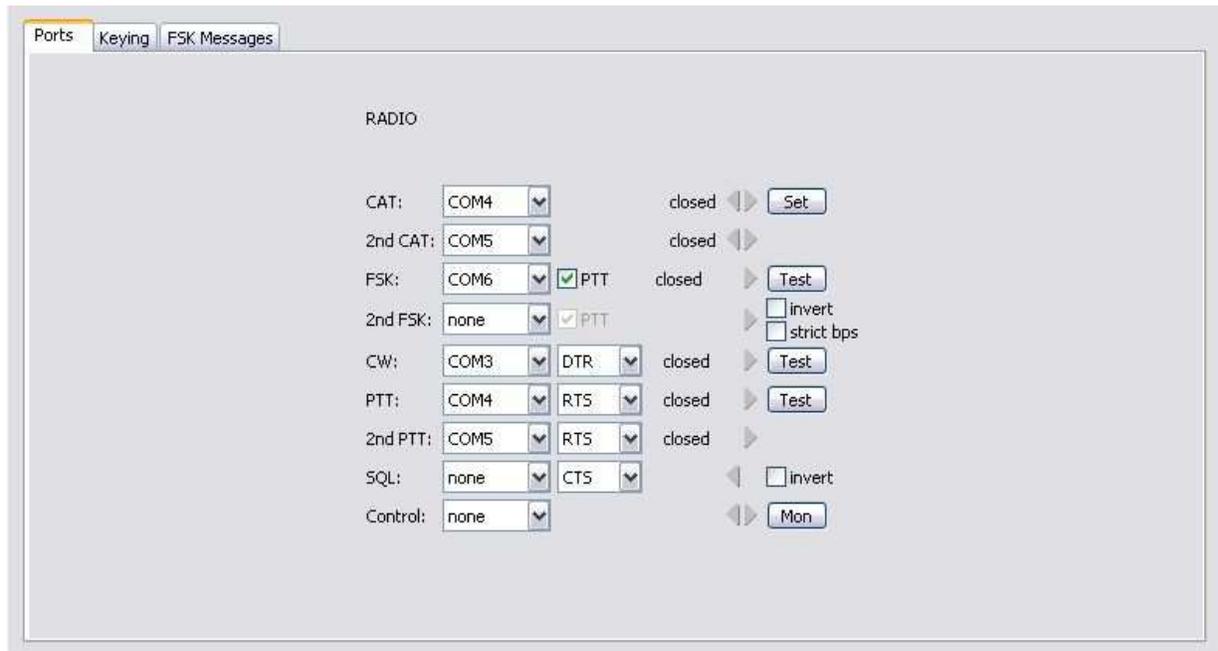

3. Save settings to a preset by selecting menu **Preset | Save as**. Choose a position and name it WSPR.

## WSPR setup:

1. Select the **Setup | Station Parameters** or press **F2**.
2. Select USB Audio CODEC for use as the Audio In and Audio.
3. Set PTT Port to the virtual serial port you assigned for **2<sup>nd</sup> PTT** in Router and set PTT Method to RTS.
4. Check Enable CAT.
5. Set CAT port to the port you set for 2nd CAT in Router
6. Configure your rig type and data communication parameters.

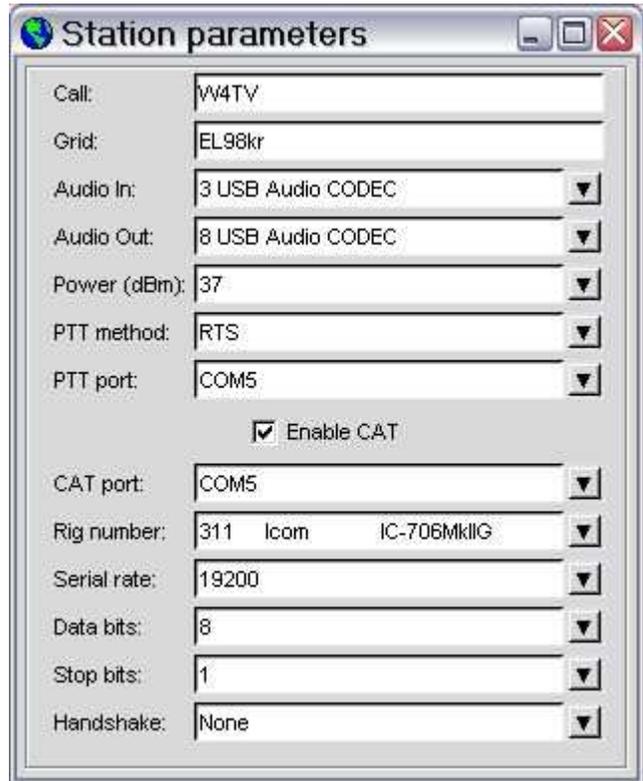

The screenshot shows a window titled "Station parameters" with the following fields and values:

Call:	W4TV
Grid:	EL98kr
Audio In:	3 USB Audio CODEC
Audio Out:	8 USB Audio CODEC
Power (dBm):	37
PTT method:	RTS
PTT port:	COM5
<input checked="" type="checkbox"/> Enable CAT	
CAT port:	COM5
Rig number:	311 Icom IC-706MkIIIG
Serial rate:	19200
Data bits:	8
Stop bits:	1
Handshake:	None