


microKeyer II and WSJT Setup

Router setup:

Note: The absolute port numbers do not matter. The key is consistency - the same port number must be used for a specific function every time it is used.

1. WSJT does not use a radio control port, FSK Port, CW Port or WinKey. You may assign those ports for other software which may be running at the same time as WSJT6.
2. Assign the **2nd PTT** port for WSJT to put the transceiver into transmit.
3. On Router's PTT tab **unchecked** "Sound card PTT."

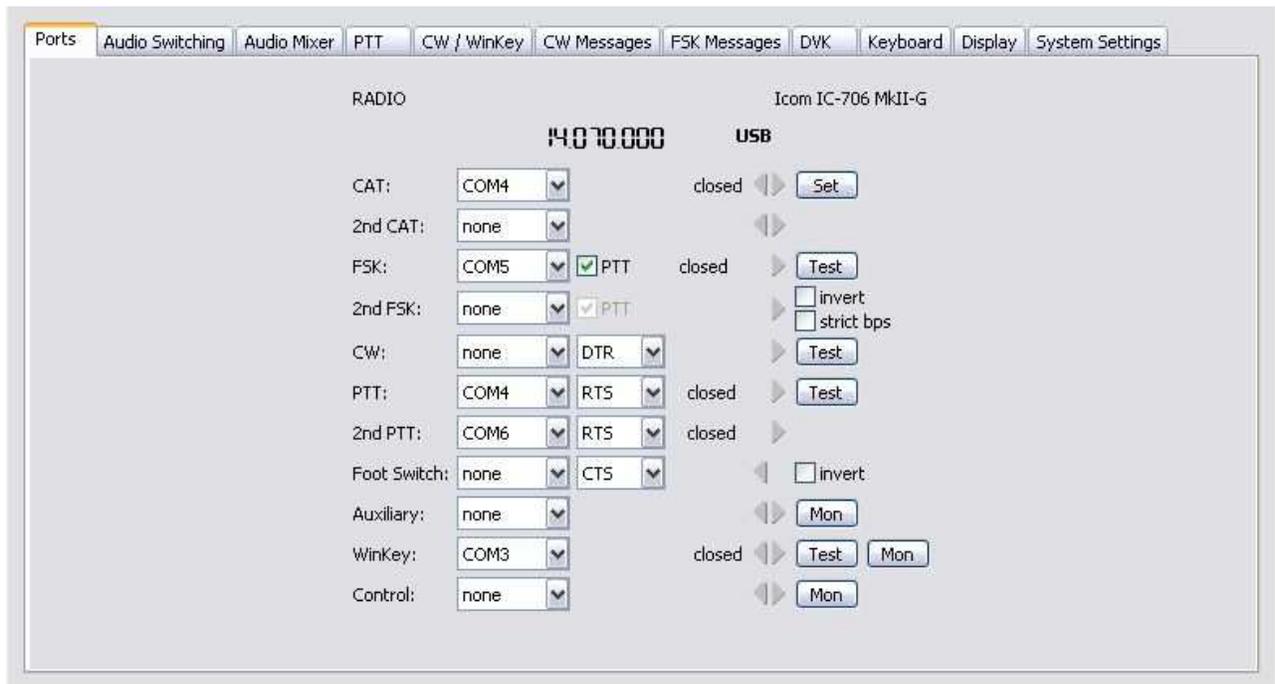


4. Save settings to a preset by selecting menu **Preset | Save as**. Choose a position and name it WSJT.


Note: when operating WSJT, microKEYER II should be configured to use the Line Input (rear) for FSK/Digital modes just as it is for AFSK or PSK31.

WSJT setup:

1. Select the WSJT Console Window and make note of the "Audio Device" numbers for microHAM CODEC Input and Output

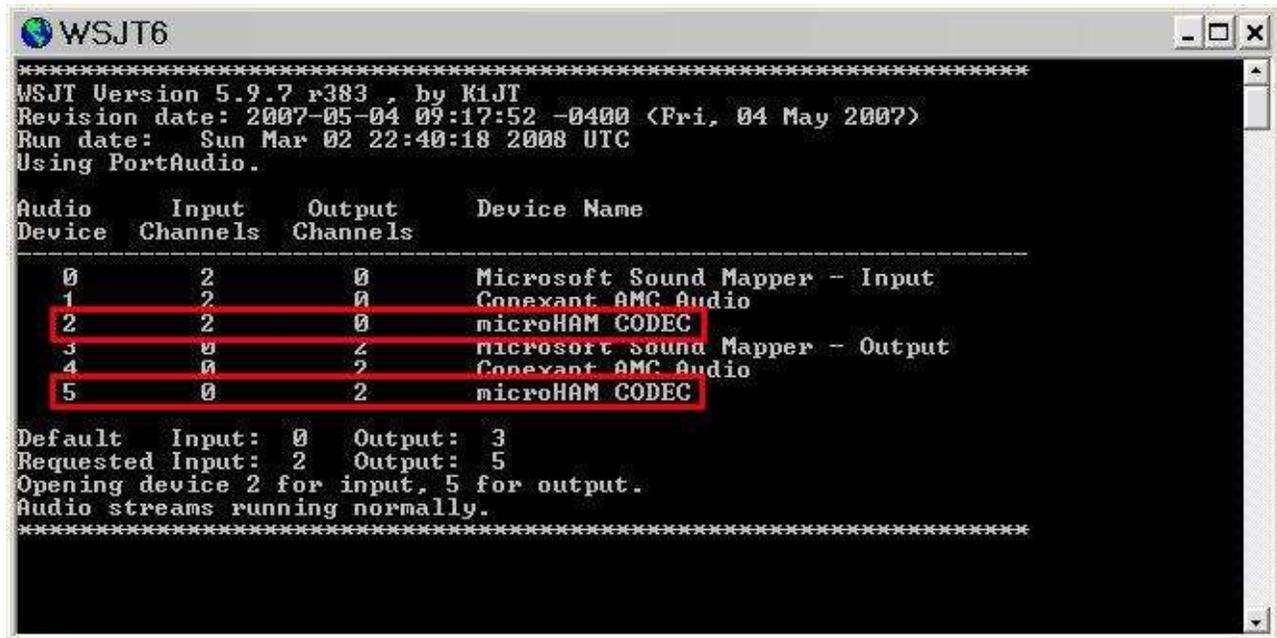

2. Select **Setup | Options** or press **F2** to open the WSJT Options dialog.

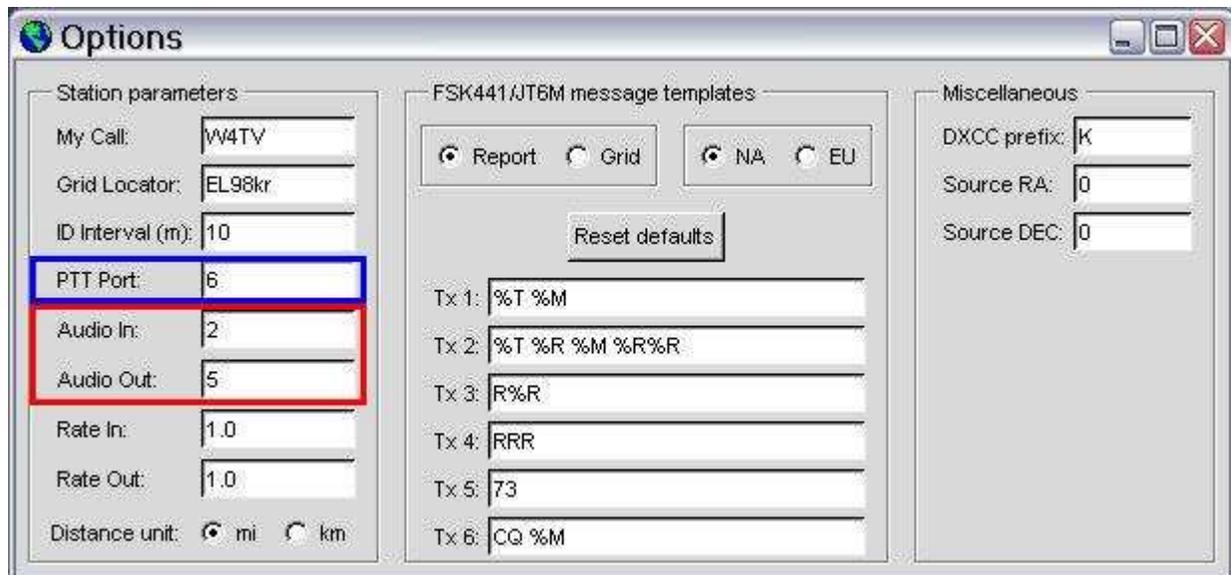

3. Set Audio In: and Audio Out to the Audio Device numbers from the Console screen.
4. Set PTT Port to the virtual serial port you assigned for **2nd PTT** in Router.

If everything is set correctly the microKEYER II Line and SC LEDS will light when WSJT is running.