

USB Interface III and AirLink Express Setup

Router setup:

Note: The absolute port numbers do not matter. The key is consistency - the same port number must be used for a specific function every time it is used.


1. Assign a port for radio control and PTT.

Note: the FSK implementation in AirLink Express is not compatible with USB Interface III. AirLink Express does not support CW.



2. Save settings to a preset by selecting menu **Preset | Save as**. Choose a position and name it AirLink.

AirLink Express setup:

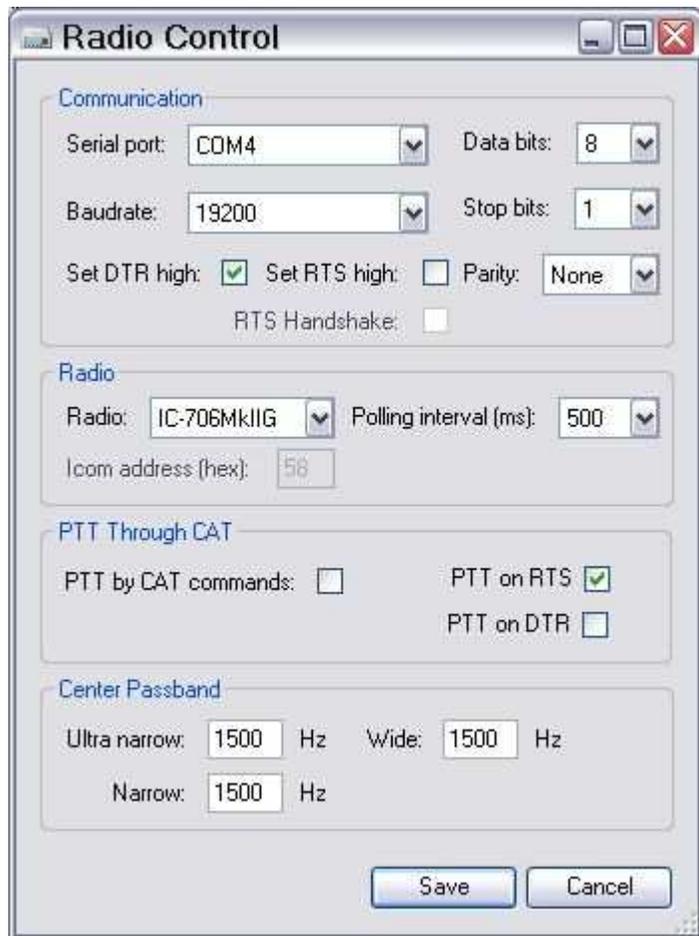

1. Click **Setup | Radio Control ...**
2. Set the serial port you selected for CAT in Router and configure the Communication parameters required by your transceiver.
3. Set your transceiver (Radio) type.
4. Check PTT on RTS.
DO NOT check "PTT by CAT commands"
5. Set the center (optimum) frequency for your operation.
6. Click Save.

7. Click **Setup | Audio Setup ...**
8. Select USB Audio CODEC as the Input Device
9. Select Left channel as the input source.
10. Select USB Audio CODEC as the output device and set the output line to Speaker.
11. Click Save.

