

USB Interface II and Win-Test Setup

Router setup:

Note: The absolute port numbers are not important. The key is consistency - the same port number must be used for a given function every time.


1. Assign the same port for CAT, CW and PTT.



2. Save your settings to a preset by selecting menu **Preset | Save as**. Choose a position and name it Win-Test.

Win-Test setup:

1. Click **Options | Configure Interfaces**

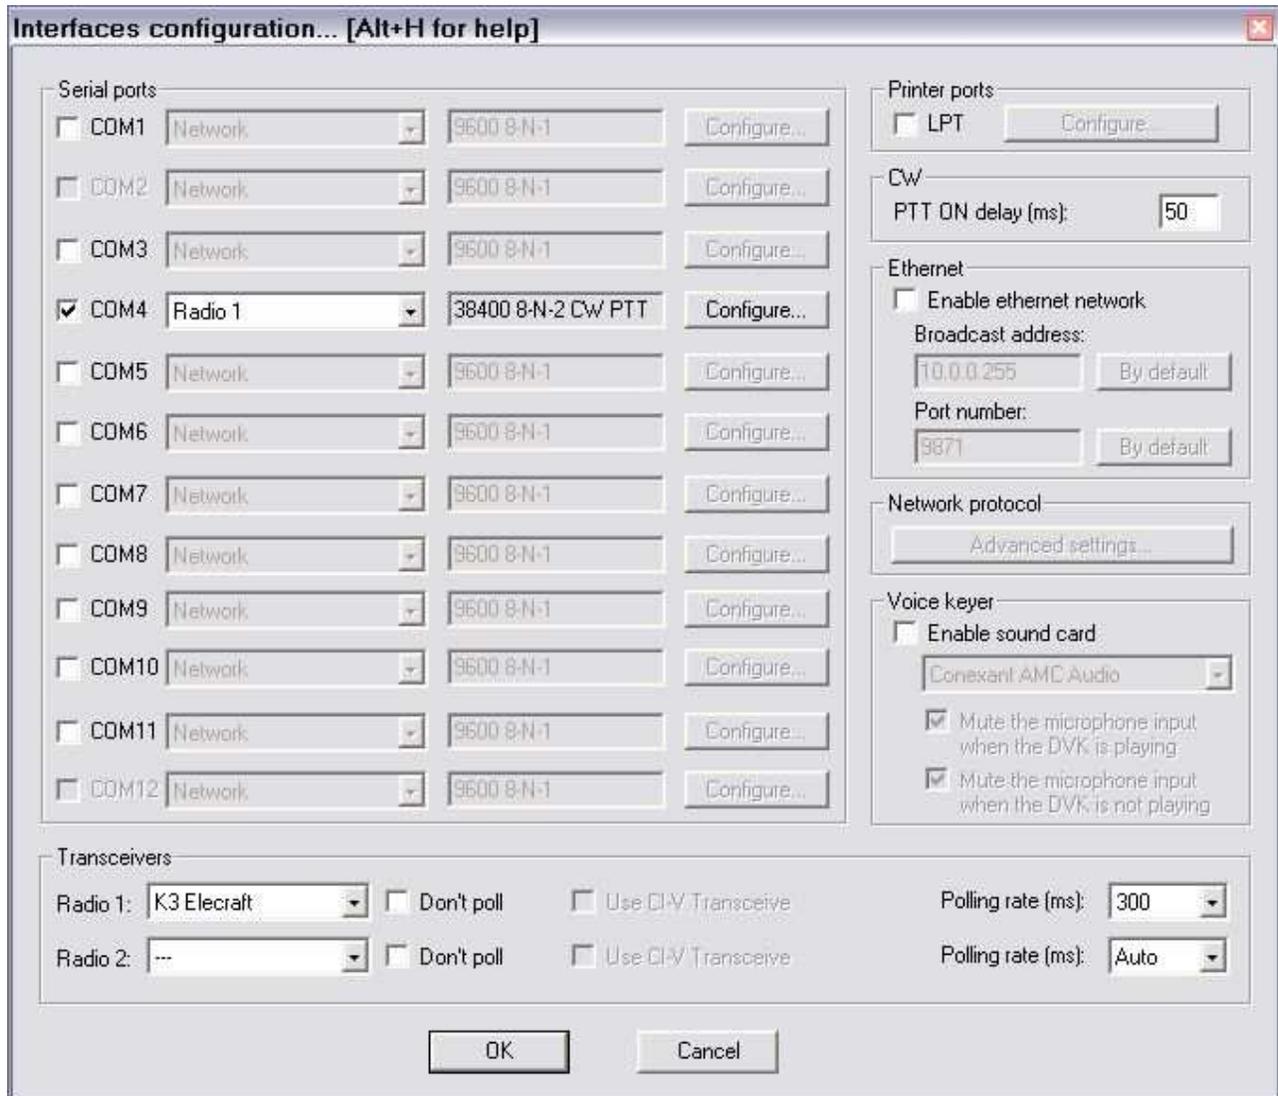

2. Check the port you chose for CAT, CW and PTT.
3. Set the Interface to Radio 1
4. Click "Configure" and set the port properties for your transceiver.
5. Set "Active with" to Radio 1
6. Set DTR to CW and RTS to PTT.

