


Digi Keyer and MMVARI setup guide

Router setup:

Note: The absolute port numbers do not matter. The key is consistency - the same port number must be used for a specific function every time it is used.



1. Assign the radio control virtual COM port.
2. Assign the same port for PTT.

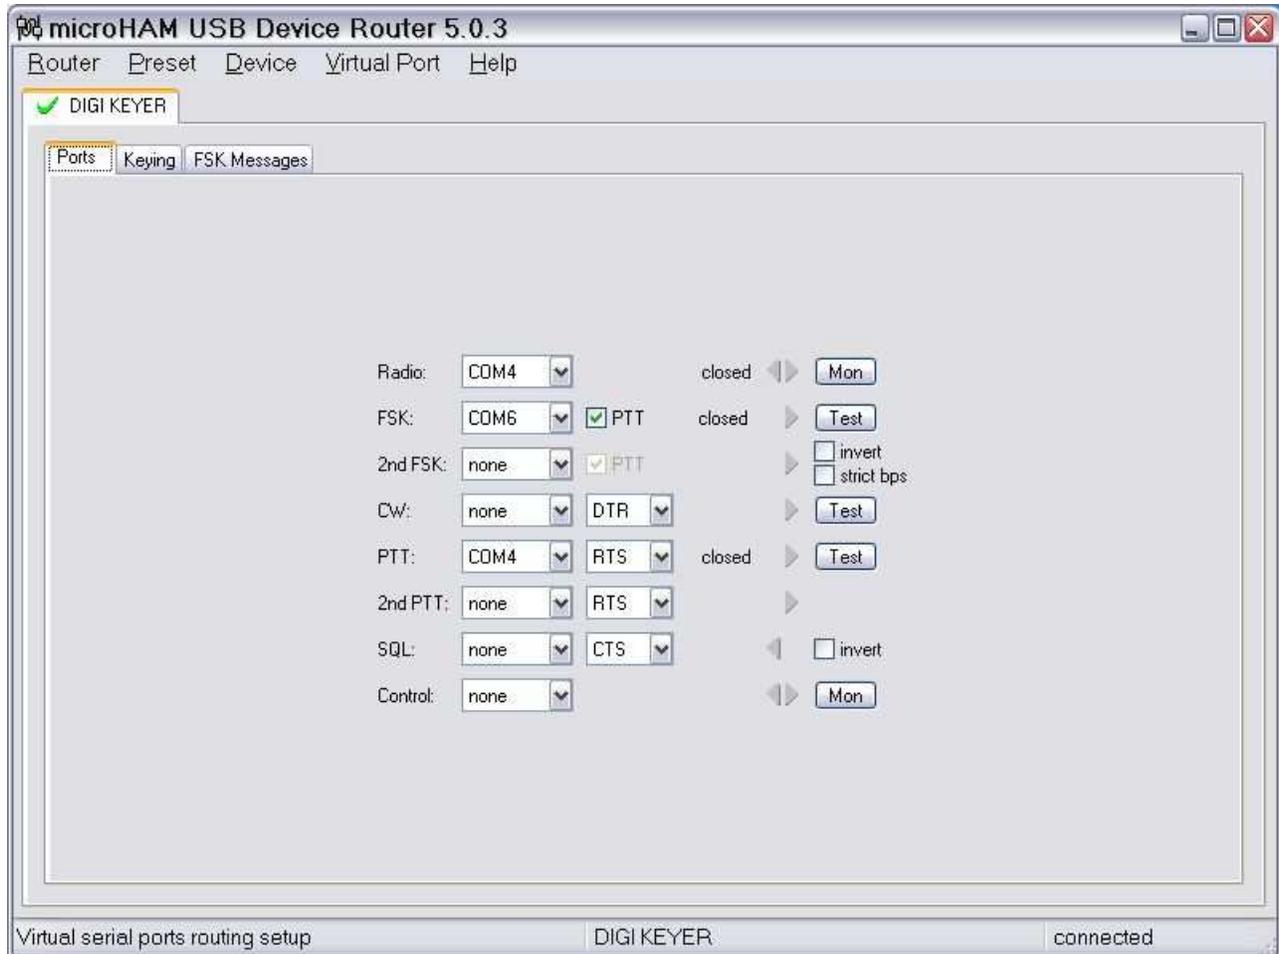

3. On the **Keying tab** select PTT Delayed and check PA PTT if DigiKeyer will be controlling an amplifier PTT line.
4. Save settings to a preset by selecting menu **Preset | Save as**. Choose a position and name it MMVARI.

MMVARI setup:

1. Click **Option | Setup MMVARI** and select the **TX tab ...**
2. Set the PTT Port to NONE. You will set the Radio Control and PTT Port on the next screen.

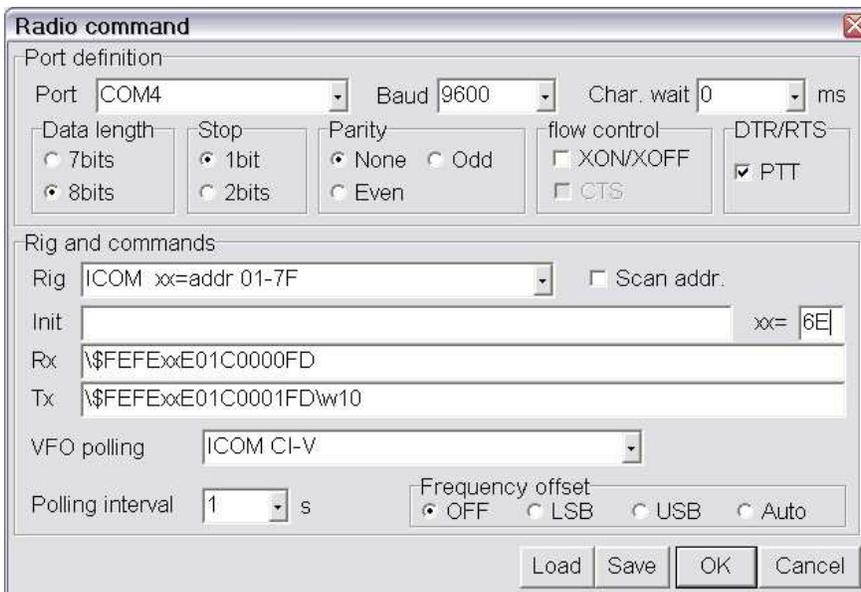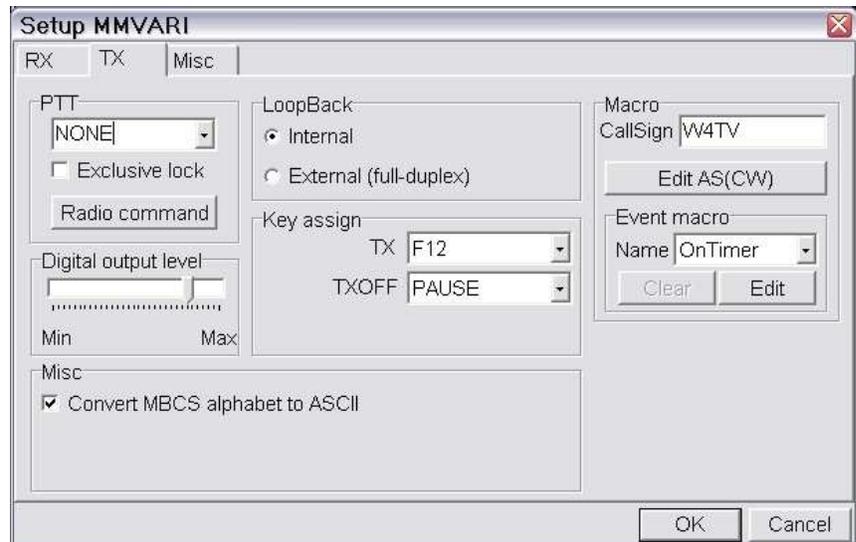

3. Click on the **Radio command** button.
4. Set the port to the same port you chose for Control on Router's Ports tab. Set Baud, data length, Stop and Parity to the values required by your radio.
5. Set the Radio type. For Icom radios you will need to set the appropriate CI-V address in the XX= box.
6. Check PTT for DTR/RTS

7. Select the **Misc tab**
8. Select Source **Mono**
9. Set Clock **11025**
10. Select the proper sound card **Device ID**

To obtain the proper ID, click **Get ID** button on Router's **Keying** tab

